


BUMPER HOOK Installation Instructions v.4.1

Tools needed: 2) 7/16" and 2) 9/16" either sockets or open end wrenches

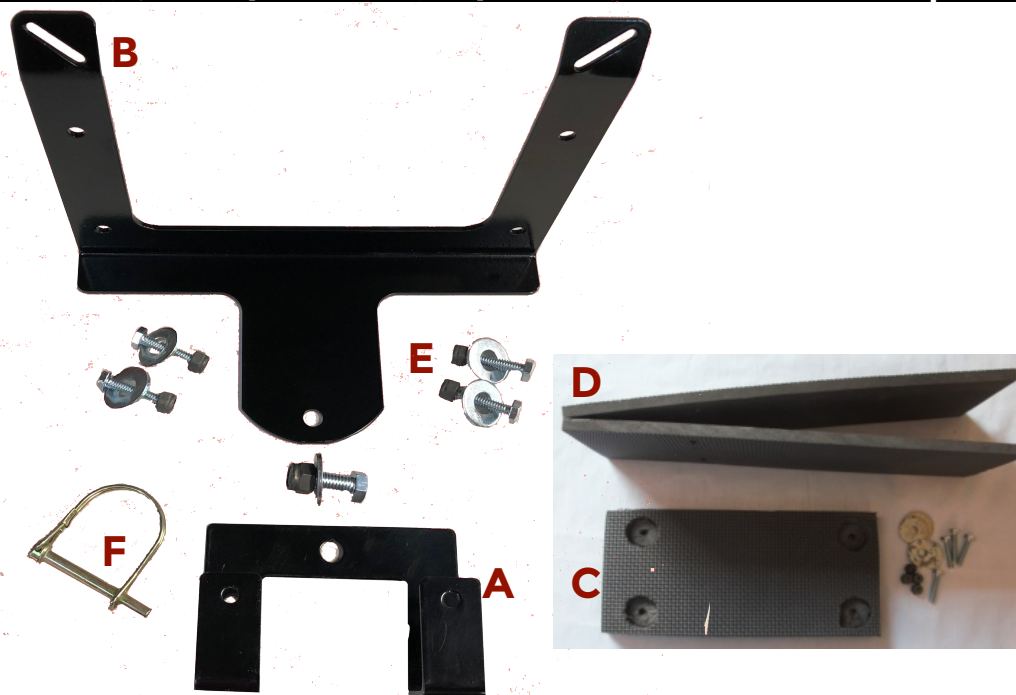

Parts list.


- A One pc hook
- B Main support base and arm
- C Rear Pad
- D Front pad
- Strap with swivel hook, strap clip and 2) Zip ties
- E 4) 1/4"x1-1/4" bolts, washer and lock nuts
- F 1) 1/4" PTO retainer clip (secures handel to unit)

Scan for
Bumper Hook
Installation Video >




STEP 1- Bolt the rear pad and front pad to the main support base and arm from the rear of base. (B) Using the 4) 1-1/4" bolt washer and lock nut sets. Make sure the bolt head and washer are recessed into the pad. snug nut to sink bolt and washer into the pad.

(B) rear view (C) front view - Nut will be on the face of the support base

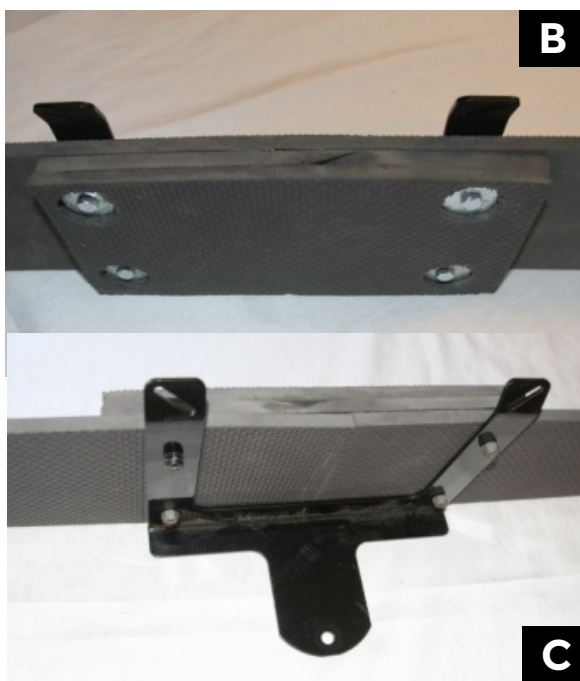

B Rear view


C Front view

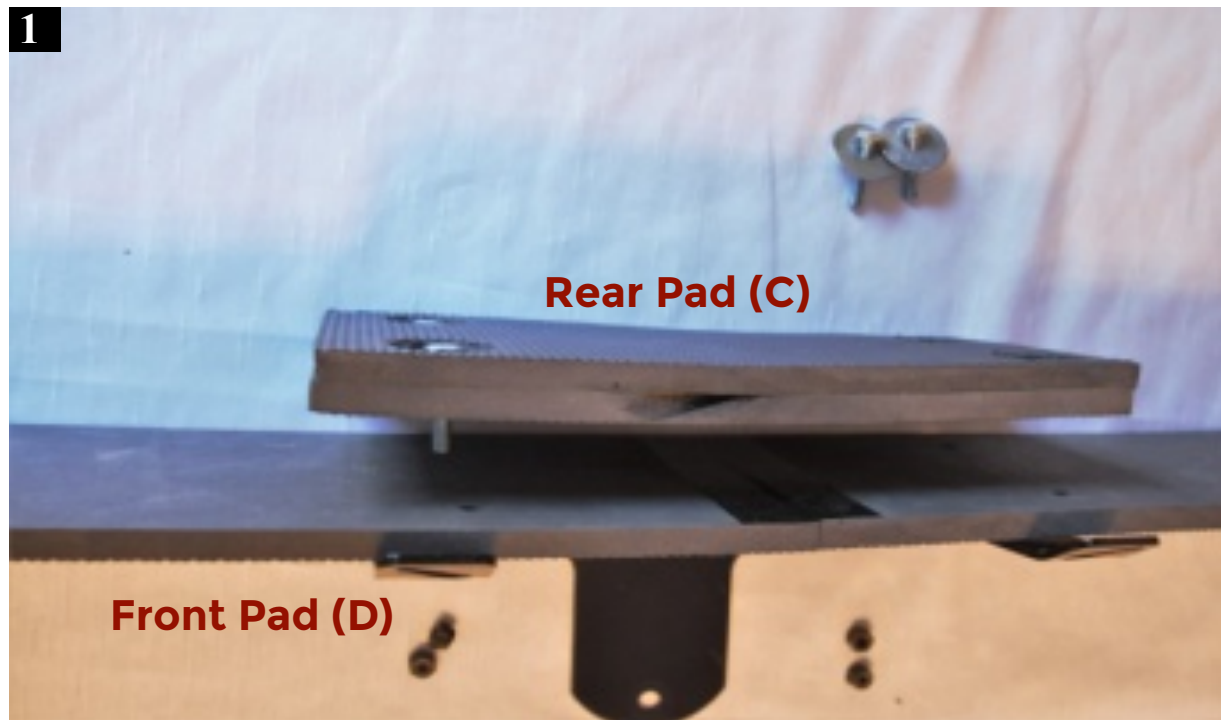


Rear Pad (C)

Front Pad (D)

STEP 2- Assemble the 1pc hook on top of the support arm with the 3/8" x 1" bolt and lock nut. Make sure the 3/8" washer is between the two metal pc's (D) Do not over tighten allow 1pc hook to still swivel.

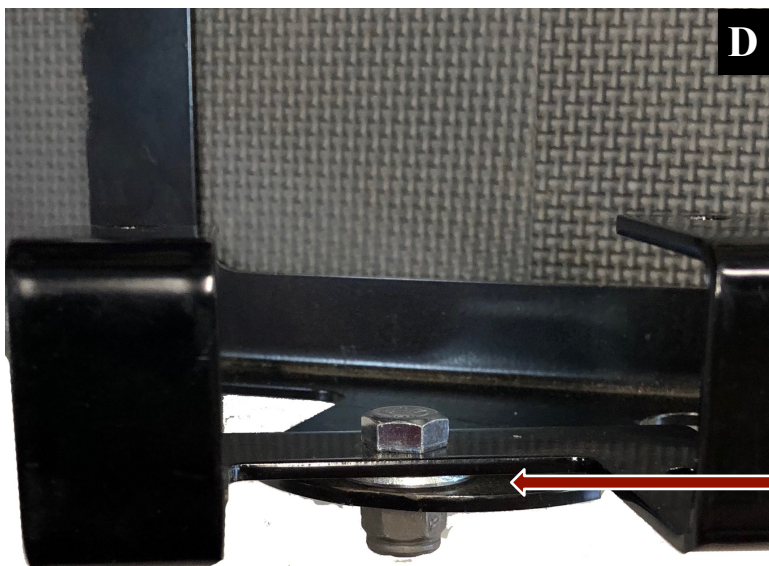

3/8 Washer
Between the support
arm and
the one pc hook

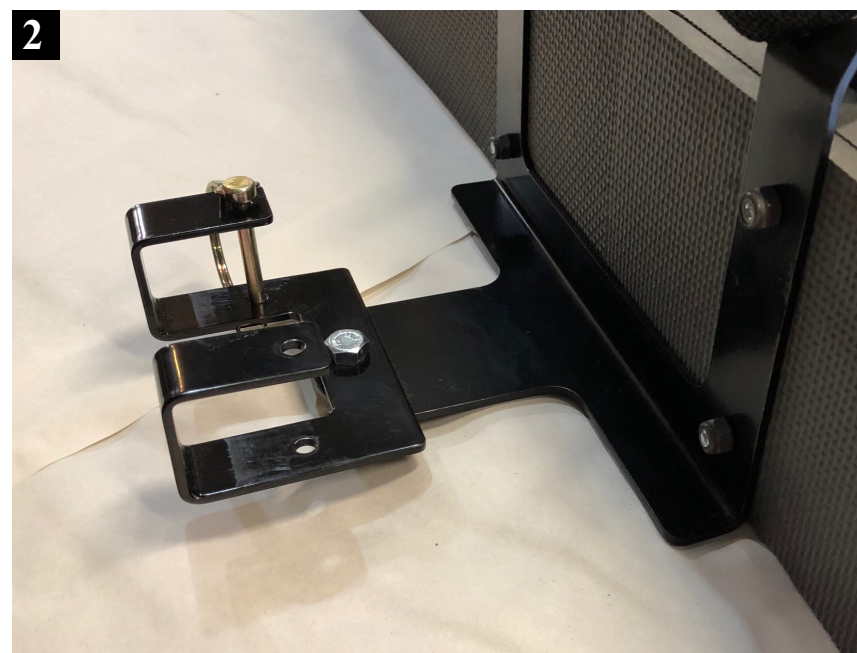


STEP 3- Once the Bumper Hook is assembled the last step is to adjust the strap to fit your tow vehicle. Hook the swivel clasp to your trunk's lid latch (E)


1" strap and swivel clasp

Center the pad to the vehicle's bumper by adjusting the ends of the straps. Pull down to take up slack making sure that the clasp is holding and not slipping.

Once centered you can cut the extra strapping leaving about 4" extra, fold the two ends of the remaining strap onto the other strap and using the zip tie secure the straps together. (F) & (G)

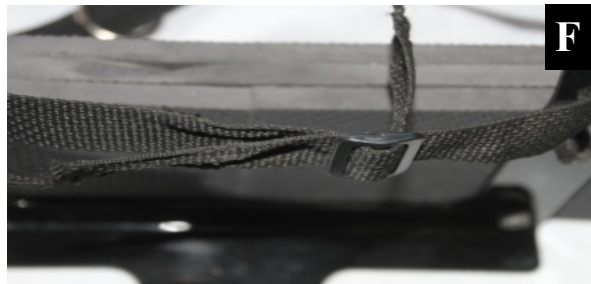

The Bumper Hook should now hang from the vehicles trunk latch and be centered. Tip the garbage cans handle over the retainer hooks and secure the cans handle by using the PTO clip to insure handle will not slip off during transportation (H). Use either set of holes to secure the handle to the one pc hook

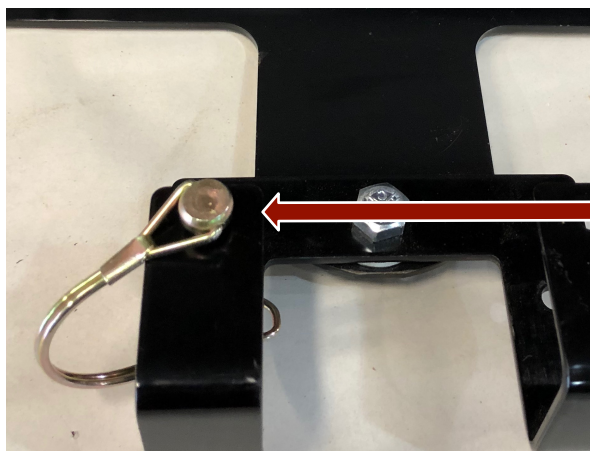

****Spring clip can be bent outward to make fastening easier.****

Warnings:

- Keep all nuts tightened
 - Do Not exceed 15 MPH, or 75 lbs.
 - Do Not carry passengers
 - Do Not use on public roads
- Turn off vehicle and put in park before attaching your Garbage Hook.

****Garbage Hooks are designed for towing,
DO NOT backup with cans attached. Damage may accrue****

We suggest height between 14"-21" allowing for approximately 30% of the cans weight to be resting on the support arm

Thank you for your order, as a small company we truly appreciate your business!

If you have any questions or concerns with your order, call or text us at 608-607-2788
Send an email to info@garbagecommander.com

Before leaving a negative review, contact us, we promise to make things right with you.
Help us grow by spreading the word and taking the time to leave a positive review.



Garbage Commander by:
LaMalco LLC - 2709 N. Burdick Rd. Janesville, WI. 53548
Garbage Hooks are patented and made in the USA.