


# UBL Installation Instructions v.4.1

## BALL OR BOLT MOUNTING

Tools needed: 2) 9/16" Either sockets or open end wrenches

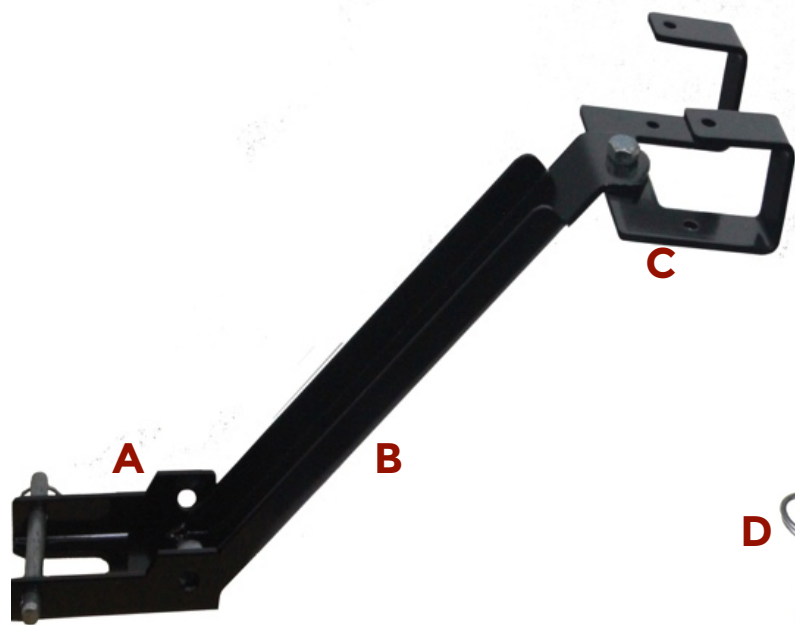

### MAIN COMPONENTS

- A Receiver Base
- B Support Upright
- C Retainer Hook
- D 3/8" retainer pin
- E Under side support washer



### FASTENERS


- 1) 3/8" x 3/4" bolt, washer and lock nut
- 1) 7/16" x 3/4" bolt, lock washer and nut
- 1) 2" PTO clips

Scan for  
UBL Installation  
Video >



### Ball Mounted Installation: For Bolt Mounted, skip this step

#### Step 1- Bolt the receiver base (A) to the support upright (B)

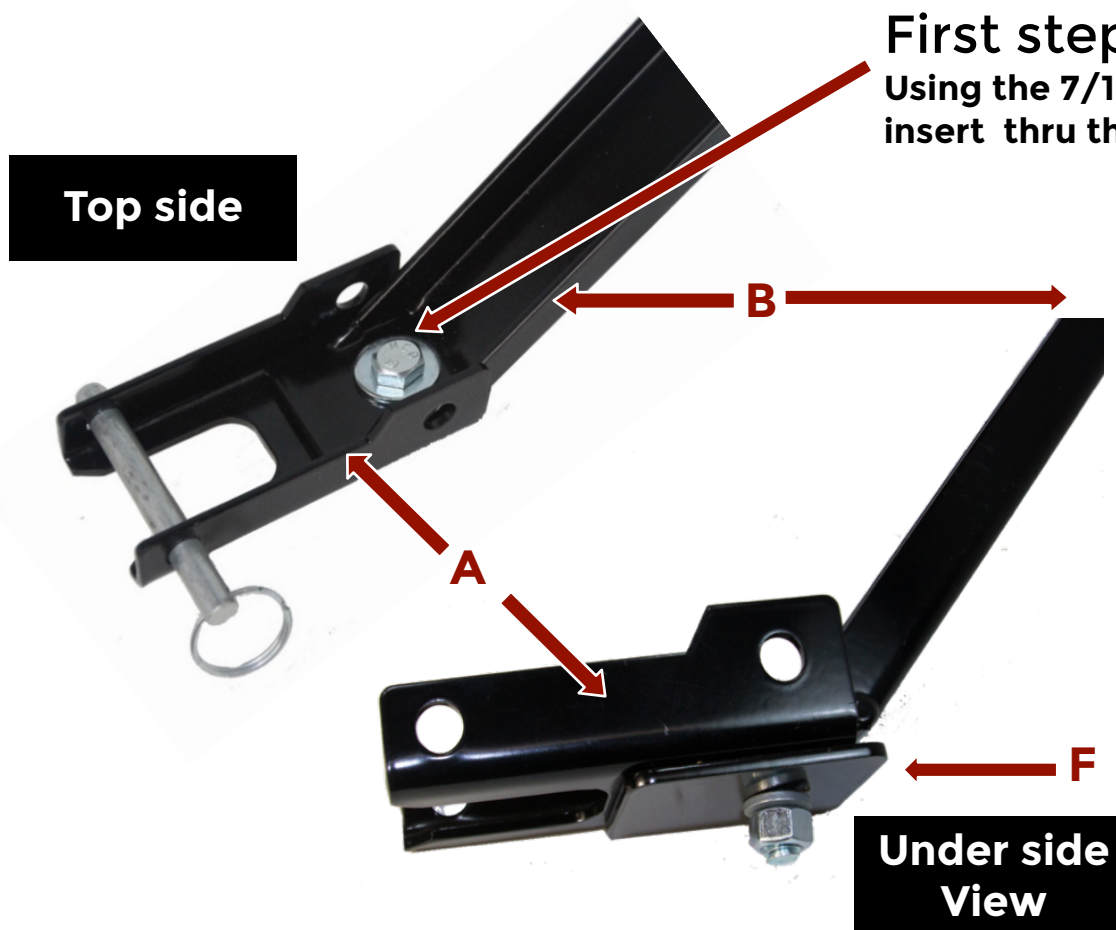

#### First step

Using the 7/16"x 1" bolt and 7/16" flat washer insert thru the hole at the base of the lift bracket (B)

#### NEXT

Slip the lift bracket (B) with the bolt & washer insert between the two flanges of the receiver base (A). Flanges will be pointed upward

From the bottom of the receiver base add the support washer (F) between the 7/16" lock washer and 7/16" nut Tighten tight, keeping support washer aligned with the receiver base


#### Step 2- Mount the retainer hook arm to the support arm



Retainer Hook support arm (C) will rest on the support arm tab.

Mount the retainer hook arm using the 3/8 x 3/4" bolt, washer, and lock nut Tighten tight.

To secure the cans handle to the hook place the PTO pin thru the two holes

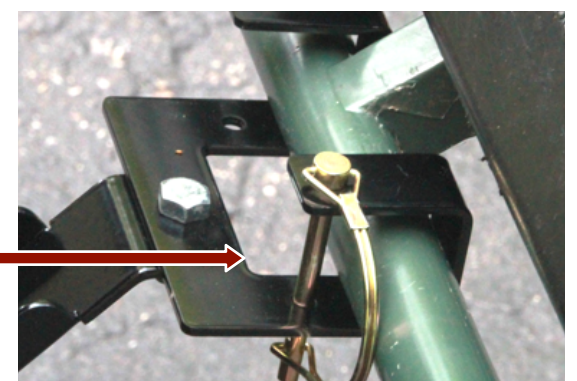

Note: PTO spring clip can be bent outward making it easier to install

**Step 3-** When ready to use, slip the ball mounting base under your trailer ball and pin in place



To mount your Garbage Hook to your receiver hitch simply insert the 3/8" retainer pin thru the ball mounting base and under your 1-7/8" or 2" ball. 2" Ball works best

**NOTE:** Do not leave unit attached without cans attached unit could swing into the rear tires causing damage to the unit.

**Bolt mounted Installation:**

**NOTE:** skip step 1) if you want to use the optional bolt installation



The receiver base will not be used, instead bolt the lift bracket (B) using the 7/16" x 1" bolt to install the flange of your tow vehicle still using the support washer under the tow vehicles flange and the lift bracket

It is common that the hole of the tow vehicle will be large then the bolt size

Support Washer (F) under will help stiffen mounting flange  
Note: Handel weight maybe reduced due to the thickness of the tow vehicles hitch flange thickness.

**We suggest height between 14"- 21" allowing for approximately 30% of the cans weight to be resting on the support arm**

**Warnings:**

- Keep all nuts tightened
  - Do Not exceed 15 MPH, or 75 lbs.
  - Do Not carry passengers
  - Do Not use on public roads
- Turn off vehicle and put in park before attaching your Garbage Hook.

**\*\*Garbage Hooks are designed for towing,  
DO NOT backup with cans attached. Damage may accrue\*\***

**Thank you for your order, as a small company we truly appreciate your business!**

**If you have any questions or concerns with your order, call or text us at 608-607-2788  
Send an email to [info@garbagecommander.com](mailto:info@garbagecommander.com)**

**Before leaving a negative review, contact us, we promise to make things right with you.  
\*Help us grow by spreading the word and taking the time to leave a positive review.\***



**Garbage Commander by:  
LaMalco LLC - 2709 N. Burdick Rd. Janesville, WI. 53548  
Garbage Hooks are patented and made in the USA.  
Patent US 9,566,837 B1 & D888,644S**