

8" Extension

Installation Instructions v.4.1


Note: This will only work with Garbage Commander products

Installation Videos

garbagecommander.com

or

[youtube.com](https://www.youtube.com)

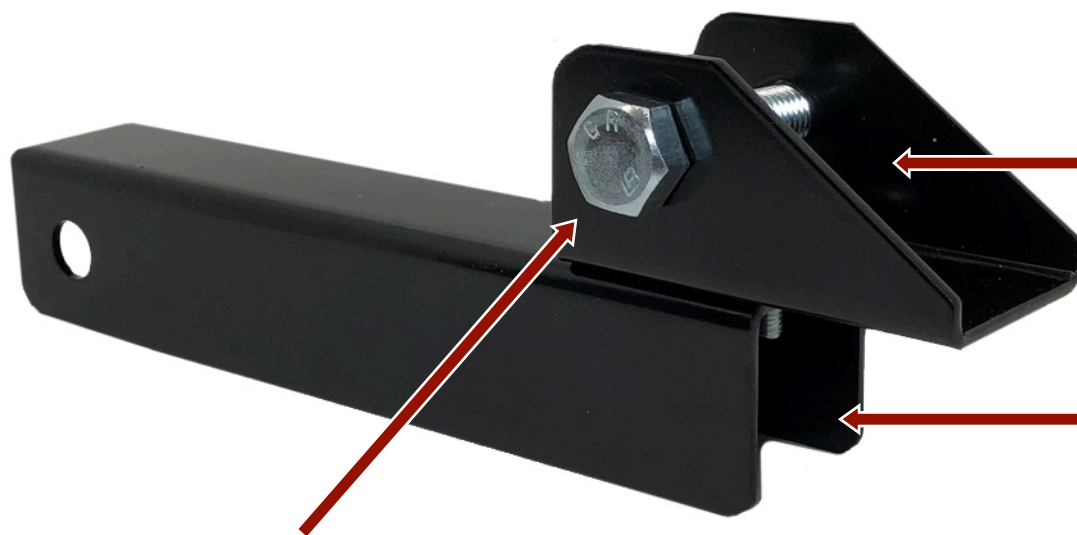

A) Receiver Mount Base
4" extension setting
Mount to center holes

B) Receiver Ext.
8" extension setting
Mount to outer holes

5/8 x 3" Bolt with lock washer and nut
use to attach the 2" receiver base of your
Garbage Hook securely to the new extension

Attach the **(A)** receiver mount base to the **(B)** receiver extension



TOP VIEW: Use the 2) 1/4" x 3/4" bolts and insert them
thru both holes with the receiver mount base

BOTTOM VIEW: Use the 2) lock washer and nuts
to secure the components together tightly.

Warnings:

- Keep all nuts tightened
 - Do Not exceed 15 MPH, or 150 lbs.
 - Do Not carry passengers
 - Do Not use on public roads
- Turn off vehicle and put in park before attaching your Garbage Hook.

****Garbage Hooks are designed for towing,
DO NOT backup with cans attached. Damage may accrue****

**We suggest height between
14"- 21" allowing for
approximately 30% of the
cans weight to be resting on
the support arm**

Thank you for your order, as a small company we truly appreciate your business!

If you have any questions or concerns with your order, call or text us at 608-607-2788
Send an email to info@garbagecommander.com

Before leaving a negative review, contact us, we promise to make things right with you.
Help us grow by spreading the word and taking the time to leave a positive review.



Garbage Commander by:
LaMalco LLC - 2709 N. Burdick Rd. Janesville, WI. 53548
Garbage Hooks are patented and made in the USA.